



How to use Afuwin Flash Utility?

(Note1: The first two steps are only available when using AFUWIN to flash BIOS under **Windows7.**)

1. Enter control panel and turn off the (UAC) item as below.

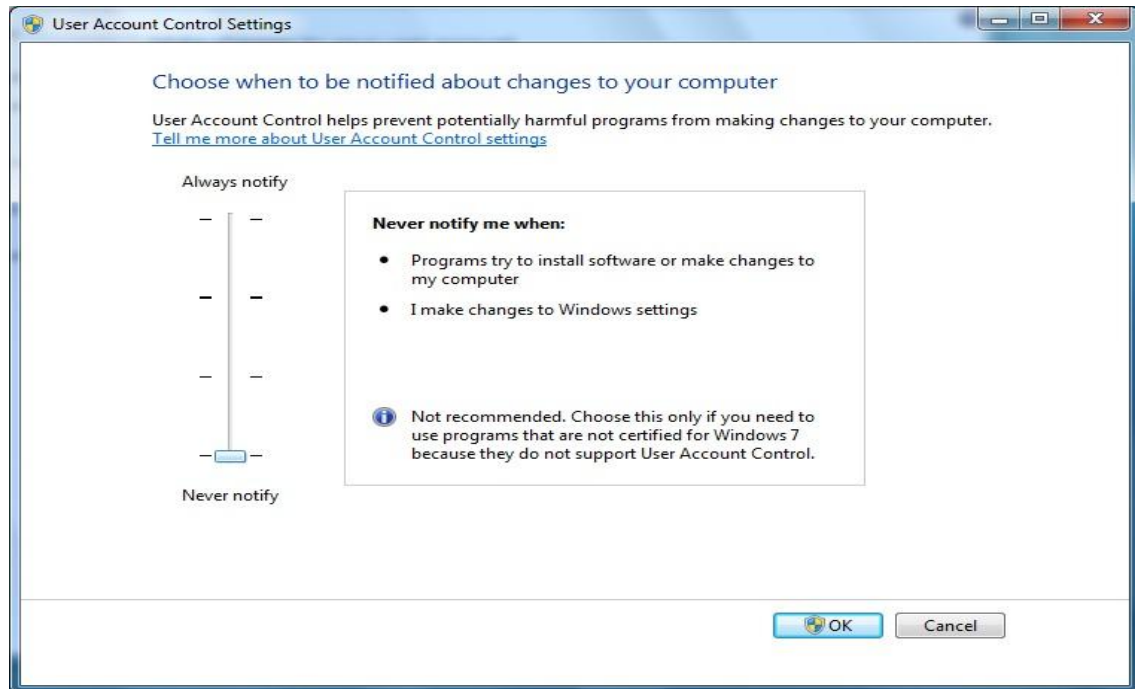

2. Restart the system.

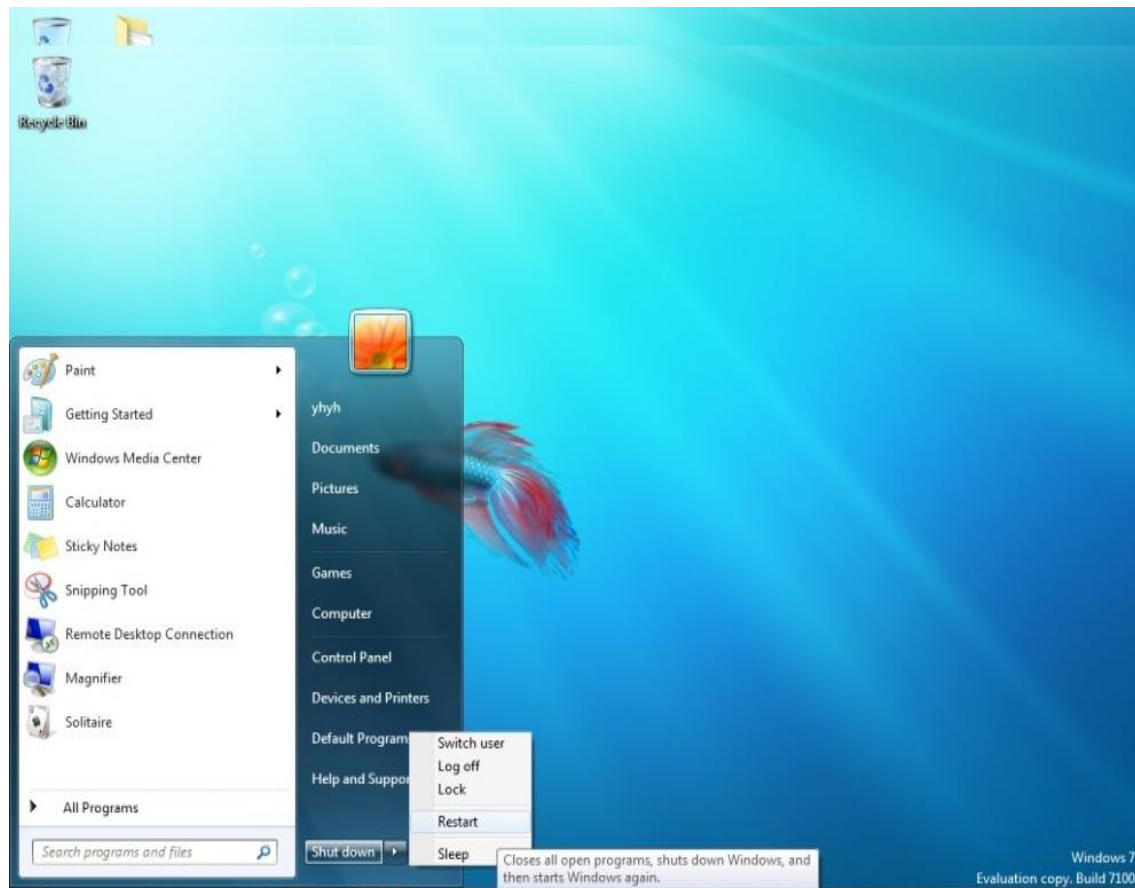


(Note2: The three four steps are only available when using AFUWIN to flash BIOS under Vista.)

3. Enter control panel and turn off/uncheck the (UAC) item as below.




4. Press "Restart".

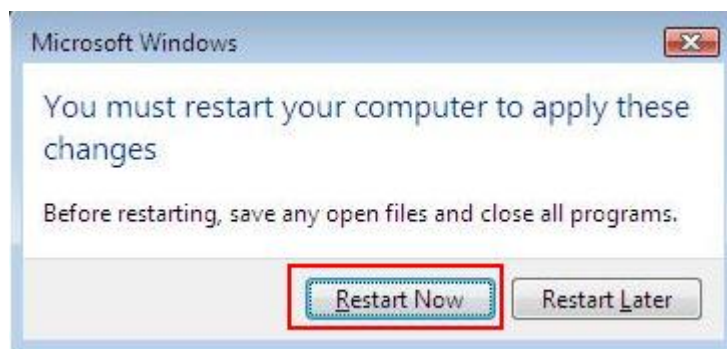

5. Copy the "AFUWIN" folder onto desktop of Windows.



6. Select & execute the "AFUWIN.exe" and press "OK".

Name	Date modified	Type	Size
A992205S.ROM	9/22/2009 3:54 PM	ROM File	512 KB
AFUDOS	8/30/2007 7:05 PM	Application	126 KB
AFUWIN	8/31/2007 5:37 PM	Application	205 KB
Ucoredll.dll	6/26/2007 5:08 PM	Application Extens...	101 KB
UCORESUS.SYS	6/26/2007 5:08 PM	System File	16 KB
UCOREVXD.VXD	6/26/2007 5:08 PM	Virtual Device Driver	8 KB
UCOREW64.SYS	6/26/2007 5:08 PM	System File	15 KB

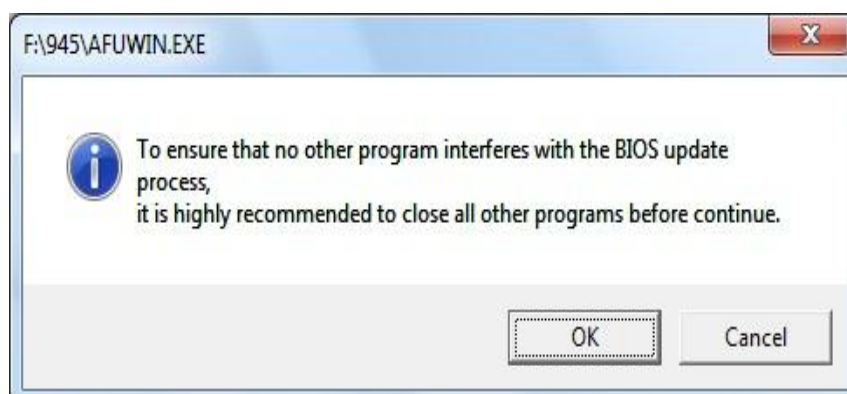


7. 5. Following below steps,


7-1. Press “Open” and load BIOS “.ROM” file.

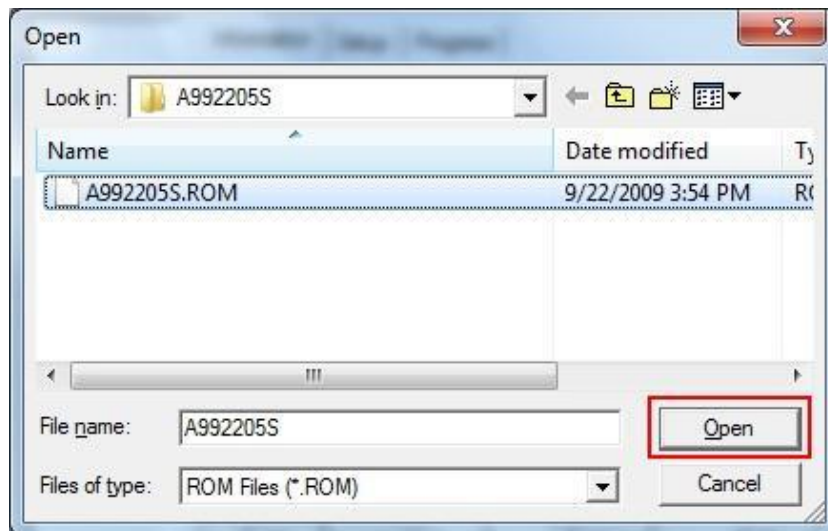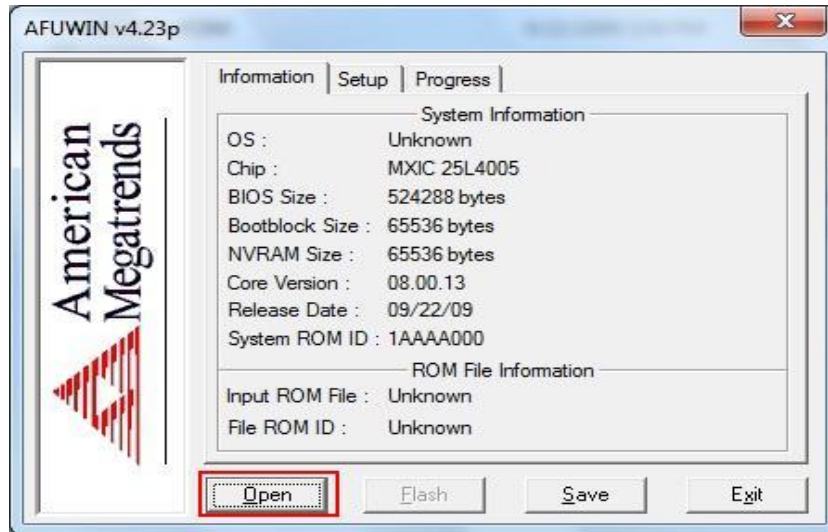


7-2. The default screen of AFUWIN flash utility.

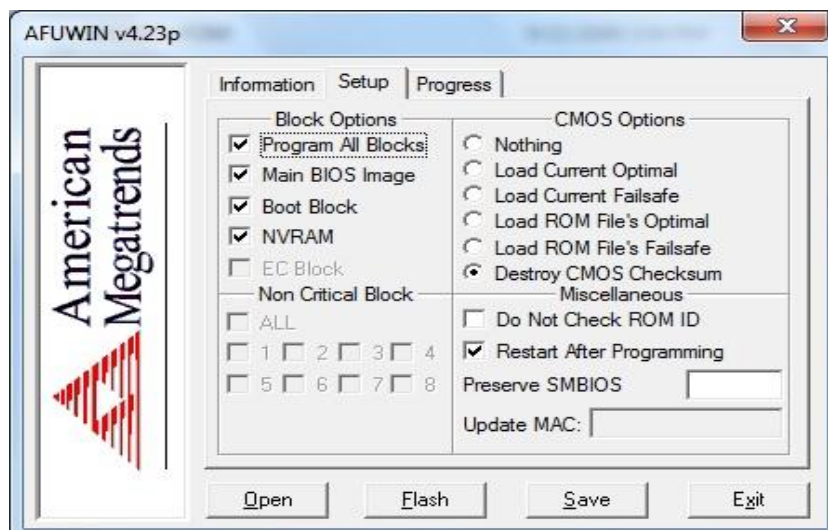

7-3. Select "Program All Blocks" & uncheck "Restart After Programming"

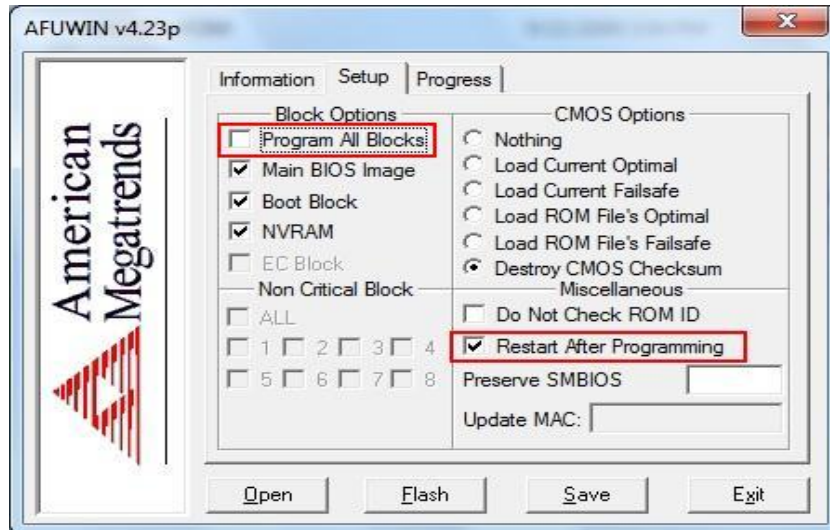

7-4. Press "Flash".

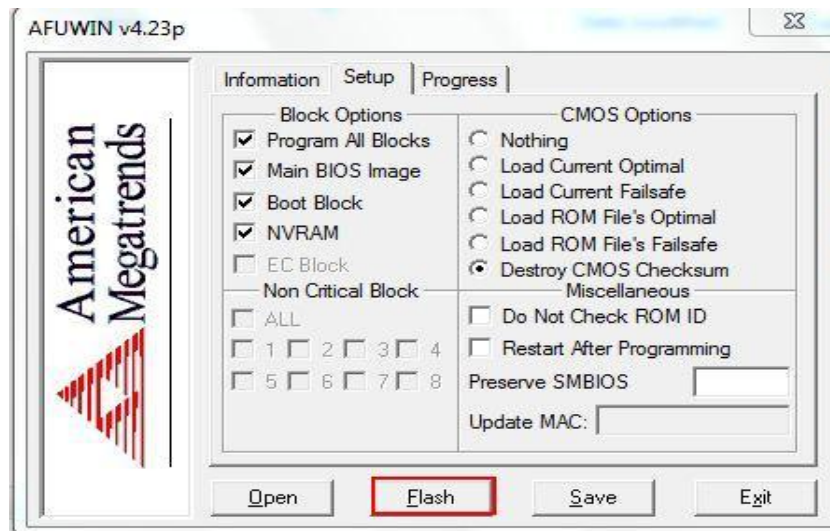

7-5. Press "Exit" and restart the system.

