


## 👉 How to use WinFlash Utility?

(Note: The first two steps are only available when using WINFLASH to flash BIOS under VISTA.)

1. Enter control panel and turn off/uncheck the (UAC) item as below.

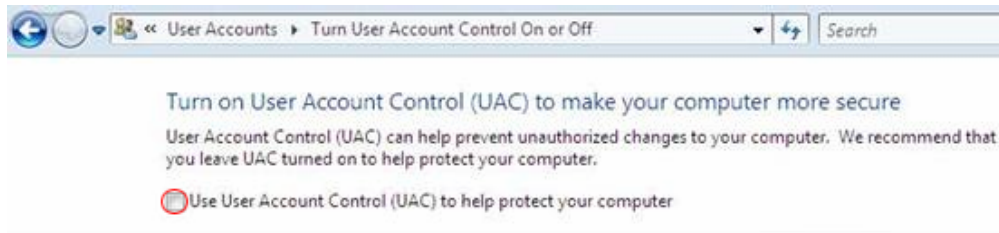


2. Press "Restart".




3. Execute WinFlash.exe in the Windows (98SE, ME, 2000 or XP). This utility user interface is as bellowing Picture II. You can choose which options you want to update. (To execute under VISTA mode, users should set "run as administrator" to fully support VISTA. Please refer to Picture I first.)


Picture I

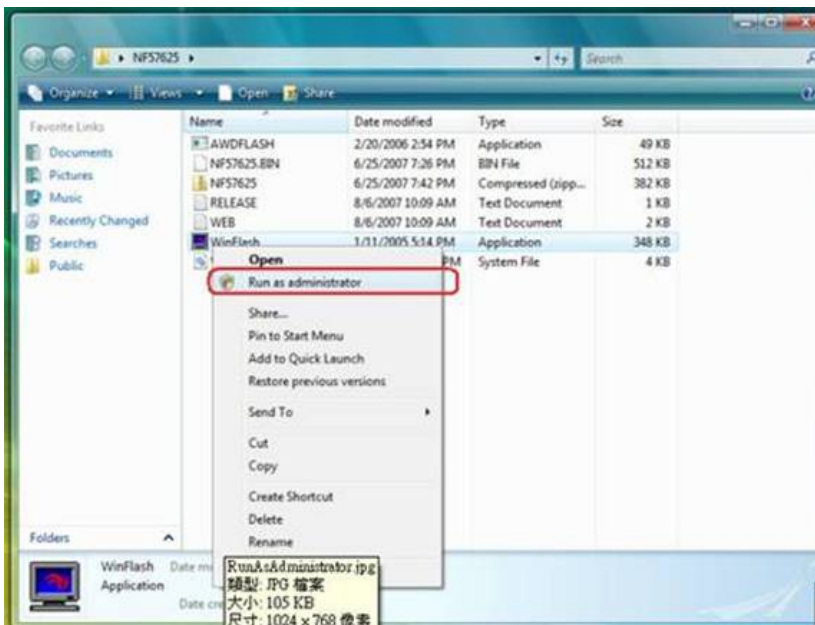


Picture II: Ex. If you want to clear CMOS, to put a check with Clear CMOS this item.

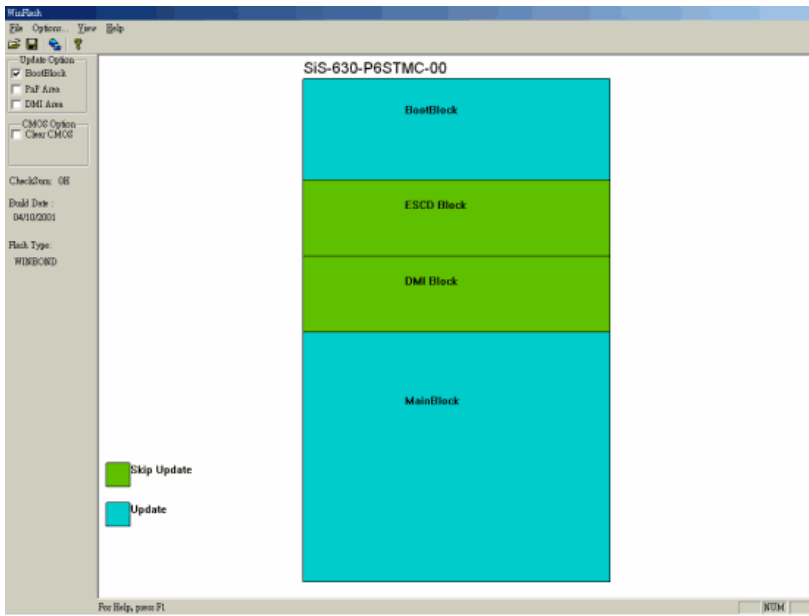


4. Press File button, and choose Open this item.

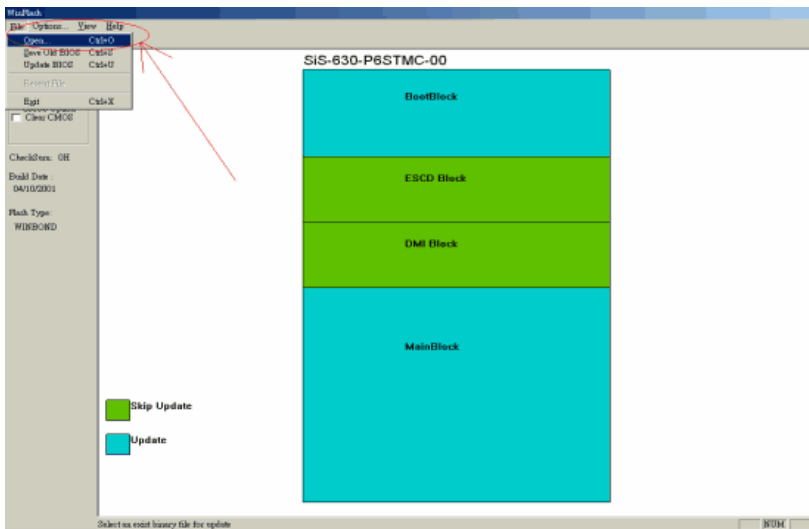


If your BIOS version don't support WinFlash, it will pop-up warning message as below.

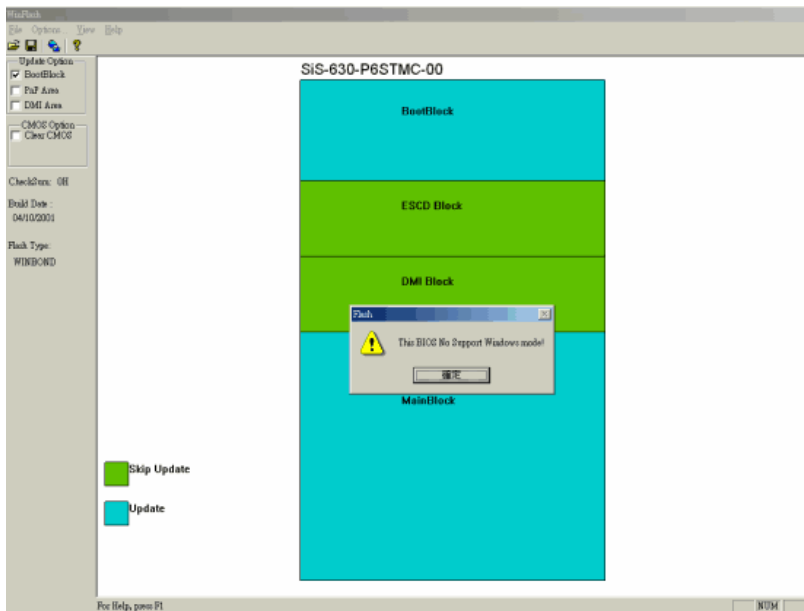


5. Load BIOS file you allocated. Then press Open button when you finish choosing BIOS file.

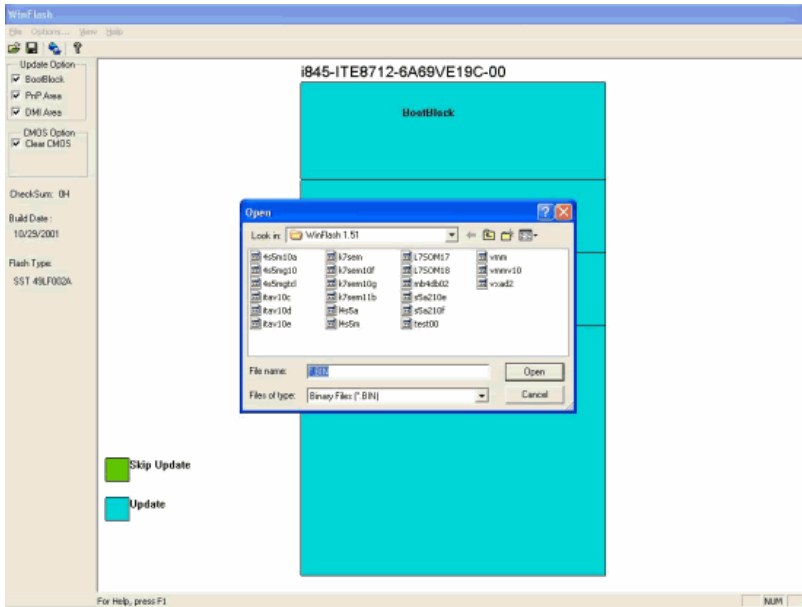


6. Please double check the update option you want. The Block you chose will change color from green to blue.

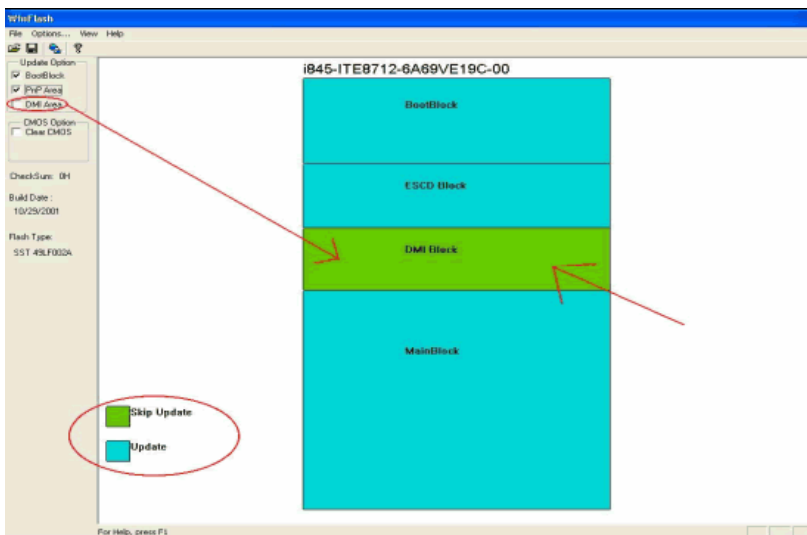


7. Press File button, and choose Update BIOS this item or press the Update BIOS now icon directly.

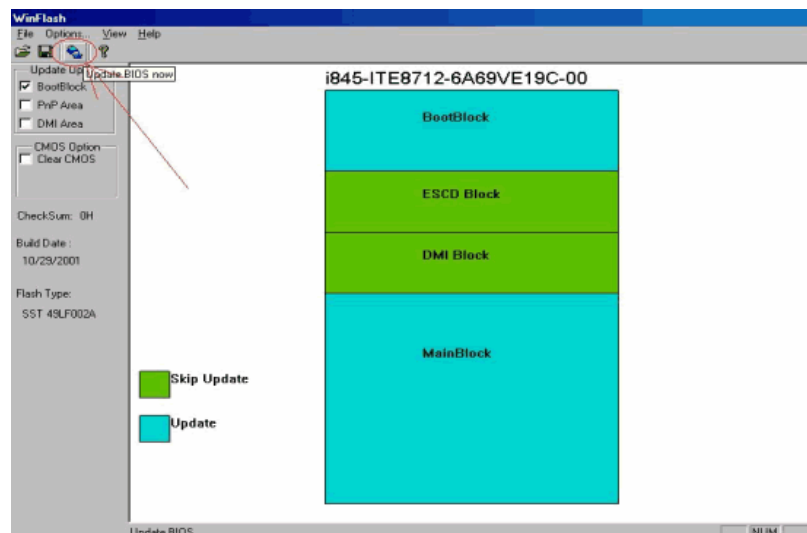


Then load BIOS file you allocated again. Then press Open button when you finish choosing BIOS file.

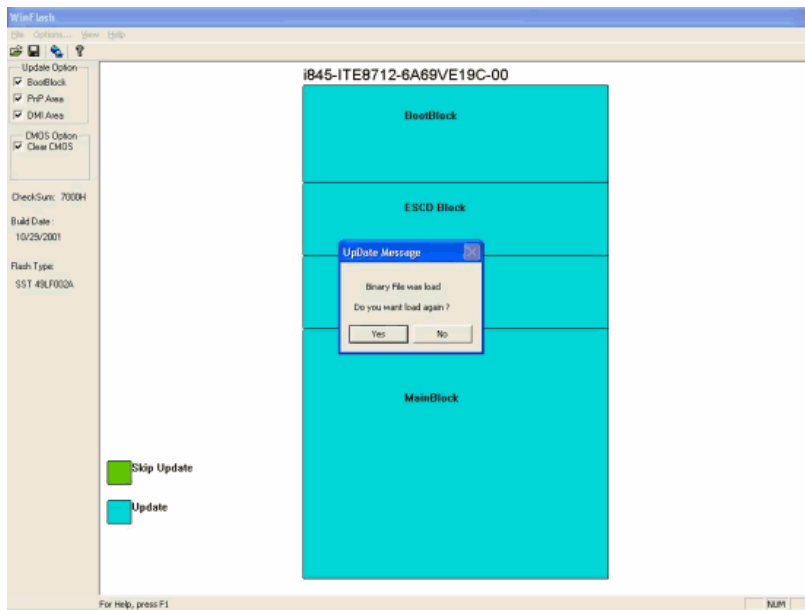

8. Press Update button to start Update System BIOS.

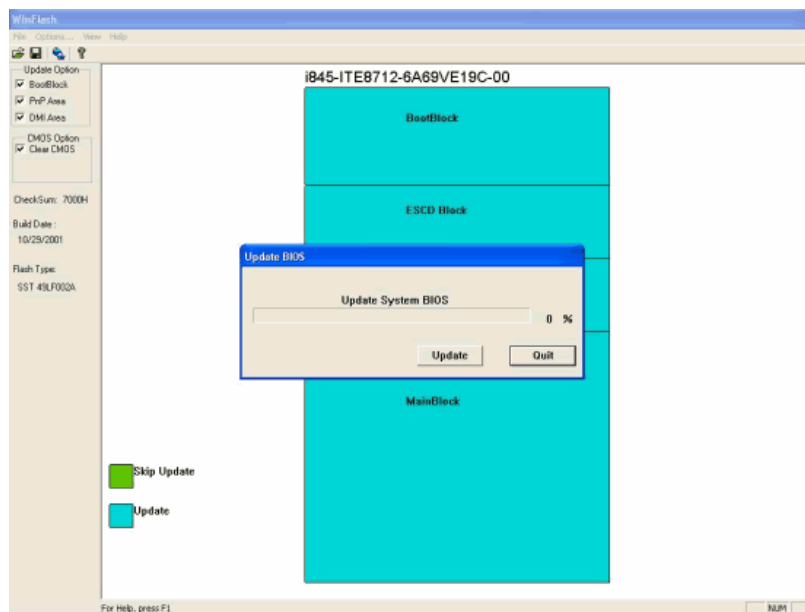

9. When flash BIOS completed, you will see this message. Press YES to reboot your system.

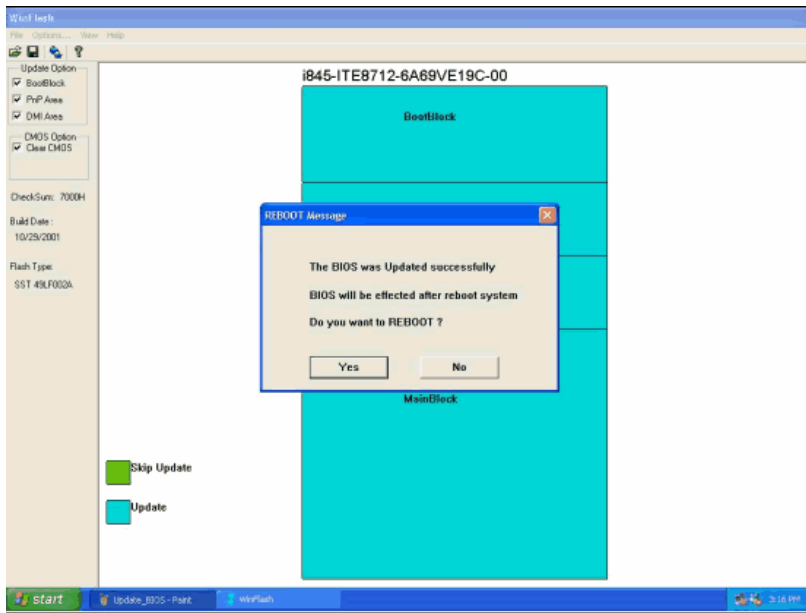

© 2008 Elitegroup Computer Systems. All Rights Reserved